



Office: 5400 N Damen Ave
Chicago IL 60625
Tel: 773-271-8514
Fax: 773-271-8518
email: info@genuinescooters.com

Part No: P6352081000D

www.genuinescooters.com



OWNER'S MANUAL

Buddy
50

Buddy
125 · 150

DEAR CUSTOMERS :

Thank you for purchasing a **Genuine Scooter Company** scooter. The efficiency and longevity of each scooter will depend heavily on the operating method of each user. This owner's manual will provide you with operating instructions, precautions, and general maintenance information required to safely operate and maintain your scooter. Please read the entire manual before operating your scooter. Please be aware of your scooter's engine size and configuration (2-stroke or 4-stroke) while reading this manual. If you have any questions, please ask your dealer for assistance.

CONTENT

Warranty Card	1	Fuel	21
Scooter safety	2	Catalyst	22
Part location	4	Notation for operation and riding	23
Identification	6	Starting the engine	23
The function of switch & controller	8	Warming up the engine	24
Main switch	8	Brake operation	25
Speedometer	9	Engine initial run-in	26
Handlebar Controls	11	Parking vehicle	27
Steering Lock	12	Periodical maintenance	28
Seat Lock	12	Periodical maintenance table	29
Fuel Tank Cap	13	Exhaust control system	32
Kick Starter Lever	13	The air cleaner	33
Luggage Compartment	14	The spark plug	34
Pre-riding inspection	15	Brake adjustment	35
Rear Brake	16	Rear brake check	35
Front Brake	16	Front brake check	36
Brake Fluid	17	Brake fluid check	36
Throttle Grip	18	Front fork check	37
Engine Oil	18	Fuse replacement	38
Air Cleaner	19	Battery	38
Tire	20	Specification	39
Lamp & Signal Light	21	Wire diagram	42
Switches	21	Periodical maintenance record	43



PGO Warranty Card

Name		Telephone	Registration date
Address			
Model		Displacement CC	Engine NO. Vin NO.

Customer Signature

Dealer Signature

SCOOTER SAFETY

▲WARNING

.Scooter riding requires special afford on your part to ensure your safety.


Know these requirements before you ride:

SAFE RIDING RULES

1. Always make a pre-ride inspection(page 13) and perform any needed adjustments or repairs before you ride the scooter.
2. Many accidents involve inexperienced riders. Most countries require a special scooter riding test or license. Make sure you are qualified before your ride.
NEVER lend your scooter to an inexperienced rider.
3. Many automobile/scooter accidents happen because the automobile driver does not "see" the motorcyclist. Make yourself conspicuous to help avoid the accident that wasn't your fault:
 - Wear bright or reflective clothing.
 - Don't ride in another motorist's "blind spot"
4. Obey all national and local laws and regulations.
 - Excessive speed is a factor in many accidents. Obey the speed limits, and NEVER travel faster than conditions warrant.
 - Signal before your make a turn or lane change. Your size and maneuverability can surprise other motorists.
 -

5. Don't let other motorists surprise you. Use extra caution at intersections , parking lot entrances and exits, and driveways.
6. Keep both hands on the handlebars and both feet on the floorboards while riding. A passenger should hold on to the scooter or the feet on then passenger foot pegs.
7. Never leave your scooter unattended with the engine running.
8. Moderate your speed when ridding over bumpy roads. Avoid hitting road hazards, such as sharp bumps and holes, in the road surface. These hazards can cause loss of control or structural damage to the vehicle.



Parts Name for Movable Model

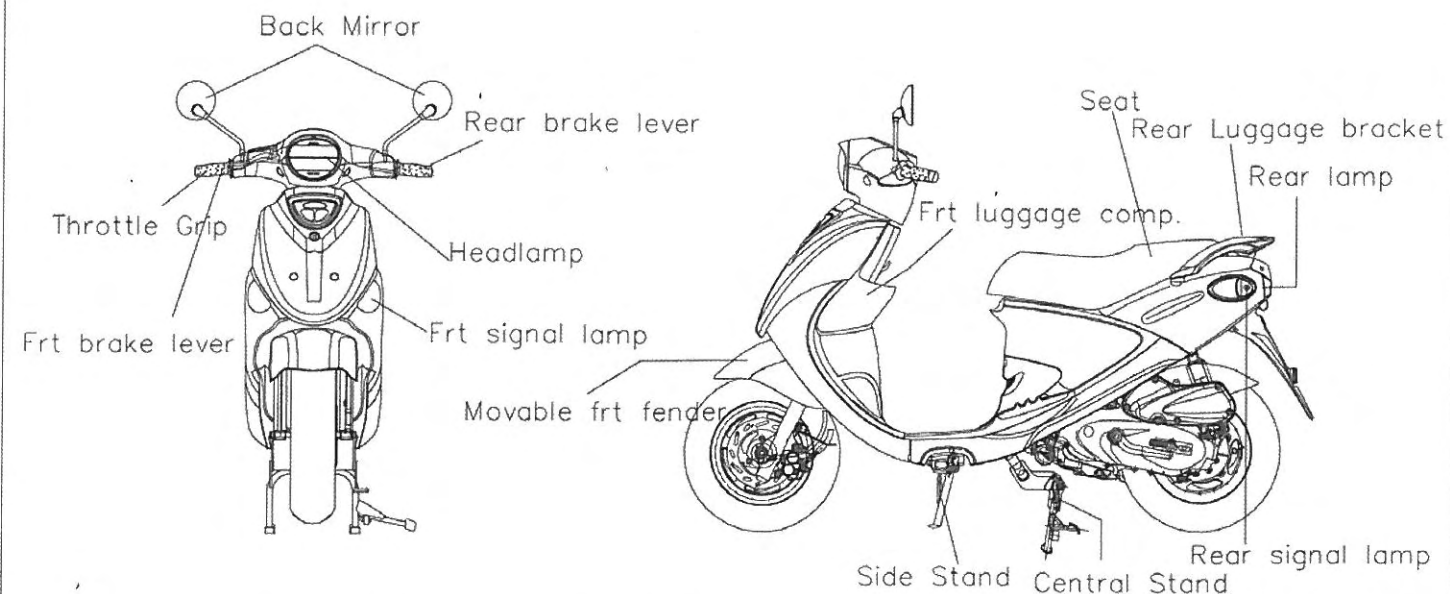

Reamarks : The equipments depend on the actual vehicle.


CAUTION:

1. Buddy is equipped with cell phone charging seat, as right figure shown:
2. Before using it, please read the warning labels first and obey it.
3. The fuse (1A) is located inside the windshield as shown.

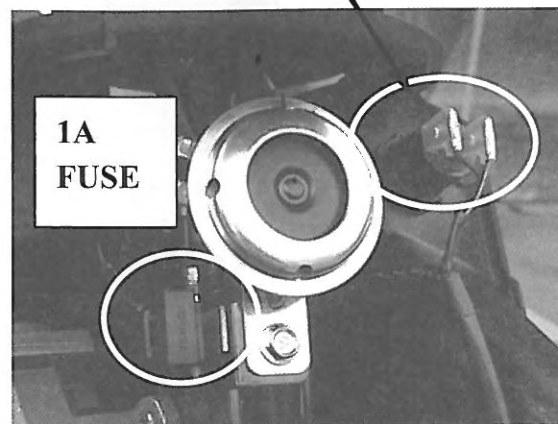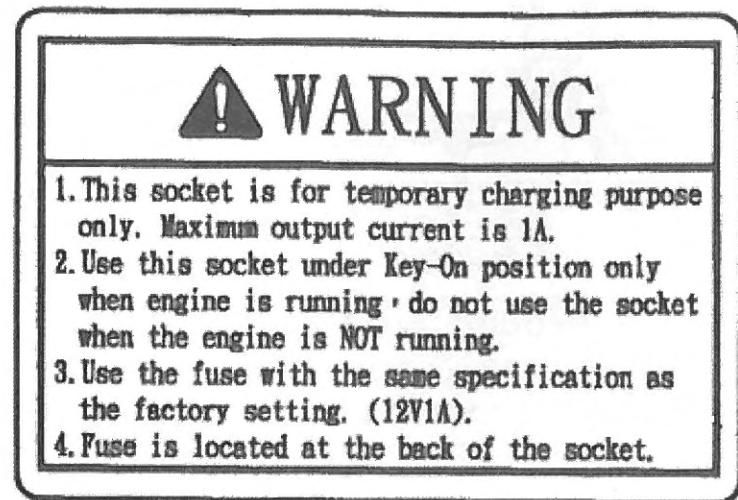

IDENTIFICATION

1. Engine No. is located (stamped) on the rear side of the left crankcase.

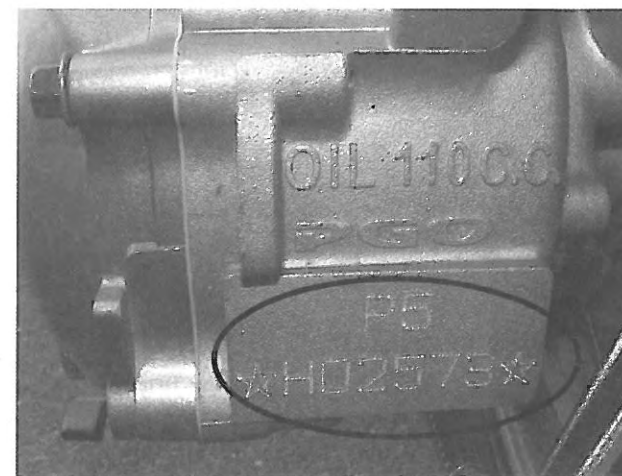

50 CC





100 / 125 / 150 CC

NOTE:

The first 2 digital is model type, the others are production serial numbers.

Your dealer need this number for ordering the parts, please write down the engine no. for their reference.

2. Vehicle Identification Number (VIN) is located (stamped) inside the inner front cover.

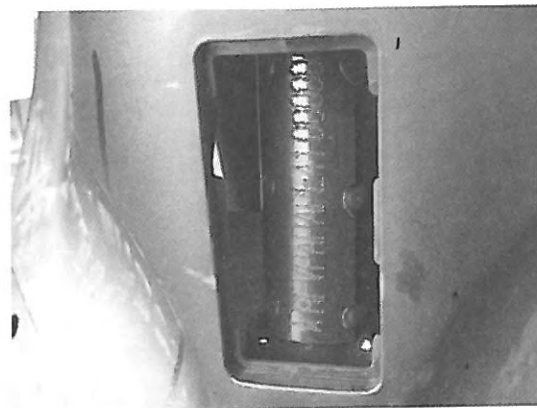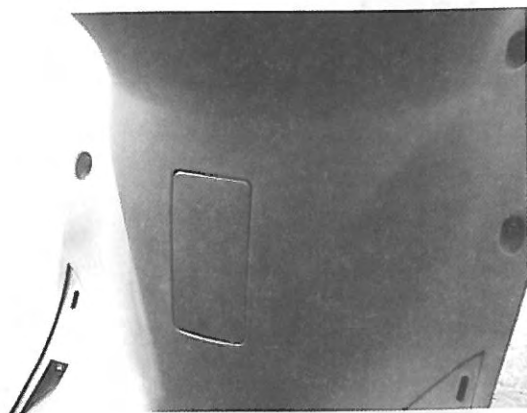

NOTE:

The first 9 digitals are model type, the last 8 digitals are production serial numbers.
Your dealer need this number for ordering the parts, please write down the engine no. for their reference.

THE FUNCTION OF SWITCHES

1. MAIN SWITCH

The main switch controls the ignition and lighting system, followings are the operation instruction.

" " or "ON"

The power is connected, engine can be started.
The key can not be pulled out at this position.

" " or "OFF"

All the power is cut off. The key can be pulled out at this position.

" "

All the power is cut off, and the handle bar is locked at this position.
Please refer to page for the detail operation instruction.

PUSH THE KEY AND TURN COUNTERCLOCKWISE

This operation can open the seat, no matter the key is at " " (ON) or " " (OFF) or " " position.



2.1 SPEEDOMETER

(2T Movable & Fixed model)

1.SIGNAL INDICATOR (GREEN)

When the blinker switch is shifted, this indicator will flash and tickling.

2.HIGH BEAM INDICATOR (BLUE)

When the HI/LO beam switch is set on 'HI', this indicator will light on

3.OIL WARNING INDICATOR



Fill the 2T oil as soon as this indicator lighting.

4.SPEED INDICATOR

5.FUEL GAUGE

The fuel gauge shows the approximate fuel supply available. At F (full) there. are 6.3 liters approximattly, Including the reserve supply.

When the meter pointer reaches to the first point of the red band, refill the tank as soon as possible.

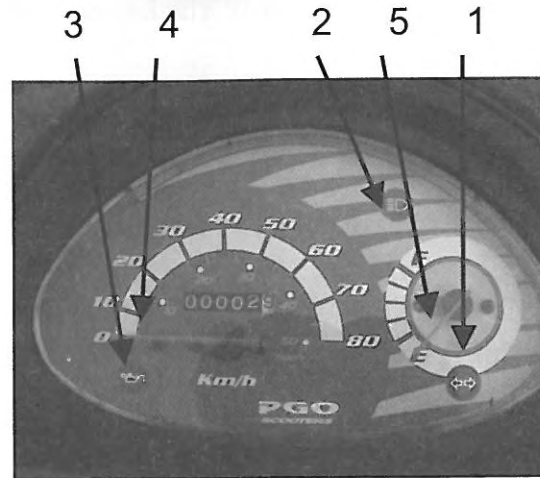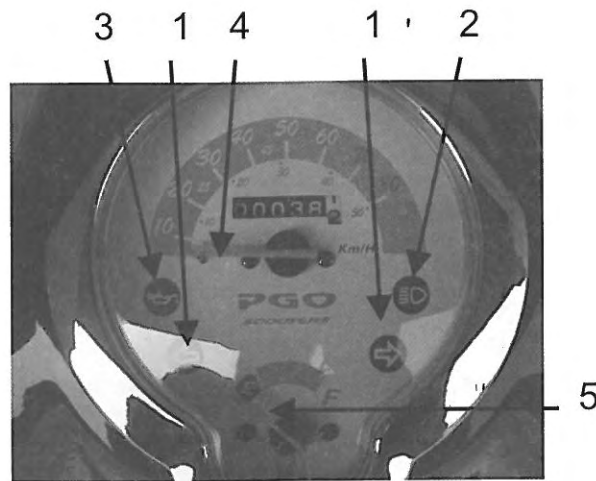

2.2 SPEEDOMETER

(Fixed 4T model)

1. SIGNAL INDICATOR (GREEN)

When the blinker switch is shifted, this indicator will flash and tickling.

2. HIGH BEAM INDICATOR (BLUE)

When the HI/LO beam switch is set on 'HI', this indicator will light on

3.SPEED INDICATOR


4.FUEL GAUGE

The fuel gauge shows the approximate fuel supply available. At F (full) there. are 6.3 liters approximattly, Including the reserve supply. When the meter pointer reaches to the first point of the red band, refill the tank as soon as possible.

5.Engine oil replacement indicator

When appear Red color, replace the 4T engine oil as soon as possible.

6.Insert the key to reset the engine oil replacement counter.

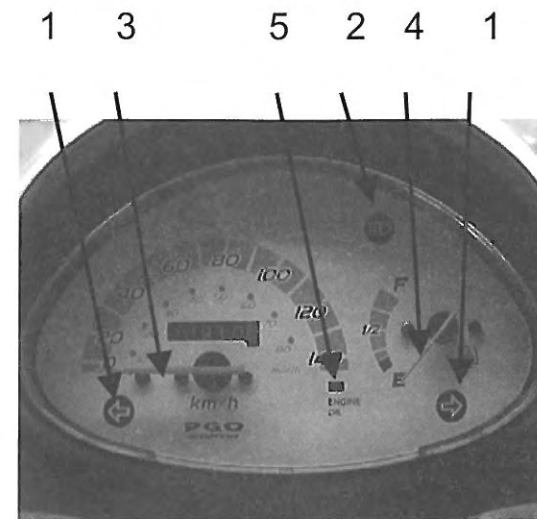

1. HANDLE-BAR CONTROLS

1.HI/LO BEAM SWITCH

HI-The high beam is on "≡D"

LO-The low beam is on "≡D"

2.Turn Signal Switch

Move to ← to signal a left turn, → to signal a right turn.

Press middle to turn signal off.

3.Horn Button

4.Starter Button

When the starter button is pressed, the starter motor cranks the engine.


5.Engine On/Off Switch

Normally this switch shall in upper position to operating the engine; But whenever there is emergency situation, you can press it down to stop the engine!

6.Parking switch

Move left to make parking signal (all signal lamps twinkling), move right to stop the signal.

-11-

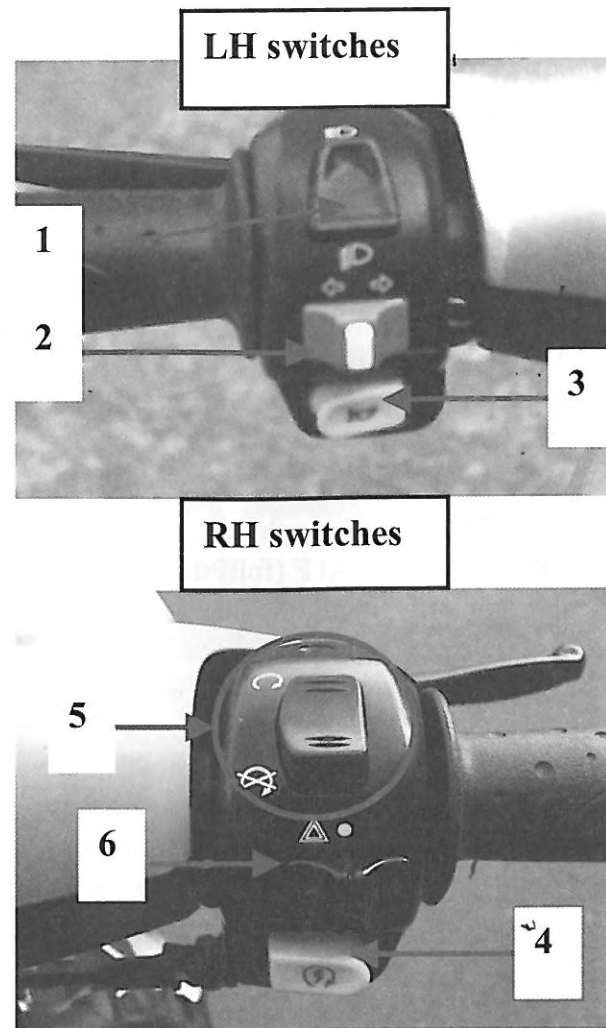

STEERING LOCK

To lock the steering, turn the handle all the way to left and turn the key from "⊖" (OFF) to "⊗" Remove the key.



NOTE:

Do not turn the key to "⊗", while riding.
The scooter loss of control will occur.

-12-

SEATLOCK

Push the key and turn counterclockwise to open the seat.



FUEL TANK CAP


Insert the key into ignition switch. Push the key and turn counterclockwise to open the seat.

Then the cap can be opened.



KICK STARTER LEVER


Swing the lever outwardly. Kick the lever down slowly till the gear stop, then kick the lever down strongly to star the engine.

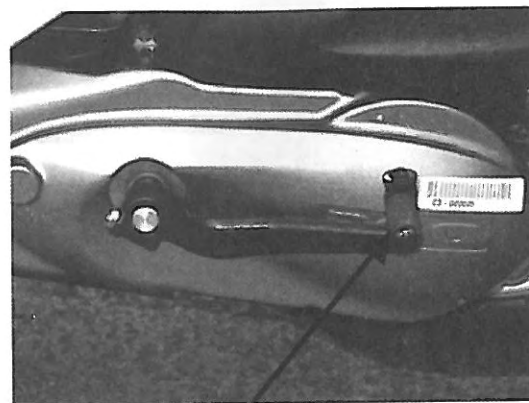

KICK STARTER

LUGGAGE COMPARTMENT

The luggage compartment is under the seat.
Maximum Weight limits: 5kg

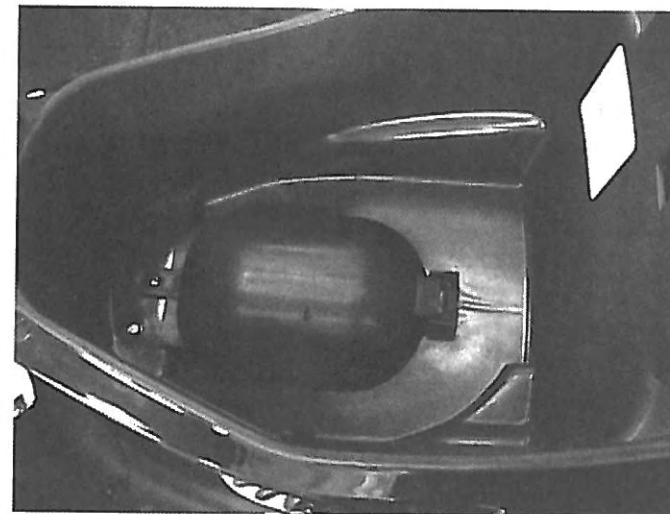

NOTE:

- 1.The max loading weight is 5 KGS.
- 2.If engine has been operating over a long time.
The luggage comp. become hot. Do not put luggage in the temperature.
- 3.Do not put important or fragile goods for security reason.
- 4.Raining or wash may cause luggage wet inside.
Please use water-resistant material for luggage wrapping.
- 5.Please lock the cover when leaving the scooter.

PRE-RIDING INSPECTION


Please do the inspection as following before riding:

ITEM	PROCEDURE	PAGE
FRONT BRAKE	Check the brake function, clearance , brake oil level, see if it is leaking. . If necessary, may refill FMVSS DOT3(4) OR SAEJ 1703 brake oil.	35-36
REAR BRAKE	Check the brake function and clearance, proper adjustment if necessary.	35
THROTTLE GRIP	Check if it is smooth, put some lubricant .	18
LUBRICANT	Adjustments if necessary. Check the oil level/according to the request to refill oil.	18
TIRE	Check the pressure, the wear out situation.	20
CONTROLLER /GAUGE CABLE	Check if smooth operation. Add lubricant if necessary.	—
BRAKE LEVER (HANDLE)	Check if smooth operation. Add lubricant if necessary.	16
CENTRAL STAND	Check if smooth operation. Add lubricant if necessary.	—
ASSEMBLY /FITTING	Check all the assembling parts, fixing & adjusting if necessary.	—
FUEL TANK	Check the fuel level. Refill up if necessary.	21
LAMP /SIGNAL LIGHTS	Check if it is operating good condition.	21

BRAKE


Adjustment:

1. Measure the distance of the rear brake lever play before the brake starts to take hold.
Free play should be: 10~20mm
2. Make free play adjustments by turning the adjusting nut at the brake arm.
Make sure the cutout on the adjusting nut is seated on the brake arm pin after making final free play adjustment.
3. Apply the brake several times and check for free wheel rotation when released.

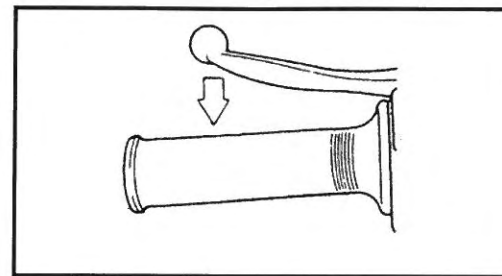

FRONT BRAKE

The front brake will be on function when hold the handle and pull the right hand lever.

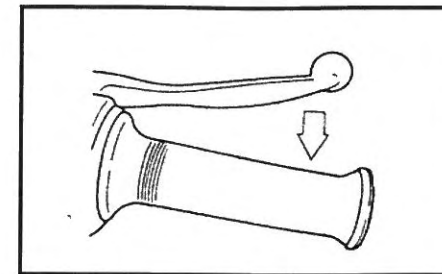

NOTE:

If the pre-riding inspection is not performed, severe personal injury or vehicle damage may result. Inspect your scooter, and perform any needed adjustments or repairs, Every day before you ride it. The items listed above will only take a few minutes to check and, in the long run, can save time, expense, and possible your life.

BRAKE (Please refer to page35)

1.Front /Rear brake levers

Inspect the free play of levers. Make sure the function is well.

Please check the brake at low speed, adjust the free play if it is not correct.

CAUTION

If the brake lever feels soft when operating,
Which means the brake system has problem.
Do not ride the scooter before the problem is ruled out.

2.BRAKE FLUID (Disk Brake)

Check the fluid level. Refill it if necessary.
Fluid Spec. FMVSS DOT 3 or SAE J1703

3.DISK BRAKE PAD

Please refer to page 36. Please go to the PGO Dealer when this brake needed repairing.

BRAKE FLUID LEAKAGE INSPECTION

Hold the brake level for few minutes to check if there is any fluid leaks from the hose connector or main cylinder.




CAUTION

Go to the PGO dealer immediately when find the brake fluid is leaking.
The leakage means the braking system has deadly dangerous problem.

THROTTLE GRIP

- Turn the grip and check the clearance & operation situation.
- Make sure the grip will automatically return to the original position.
- Ask your dealers for adjusting advice if necessary.

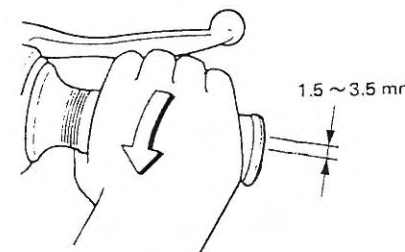

ENGINE OIL


1. 4T Engine (100 / 125 / 150 CC)

- Engine oil volume must be examined after engine warm-up 2-3 min. Be sure to execute on flat road.
- Draw out and examine the oil gauge. Please refill if the volume below the low warning line.



2. 2T Engine (50 cc)


- Add the 2T engine oil into the oil tank.

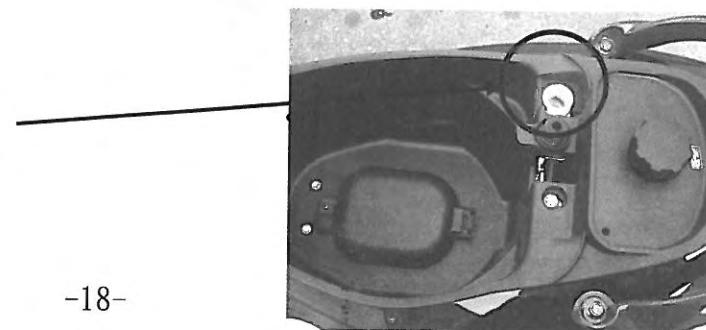


AIR-CLEANER

The air filter will keep dust away from the engine and also protect it against wearing out. Please ask the dealer to check & clean the filter periodically, or by yourself.
(ref:page 33)

1. 4T Engine (100 / 125 / 150 CC)
Wet paper filter element

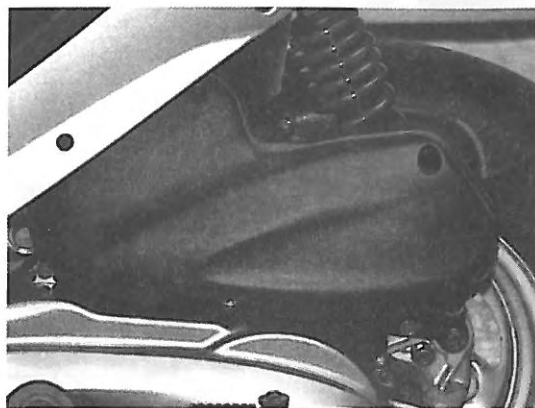

2. 2T Engine (50 CC)
Sponge filter element

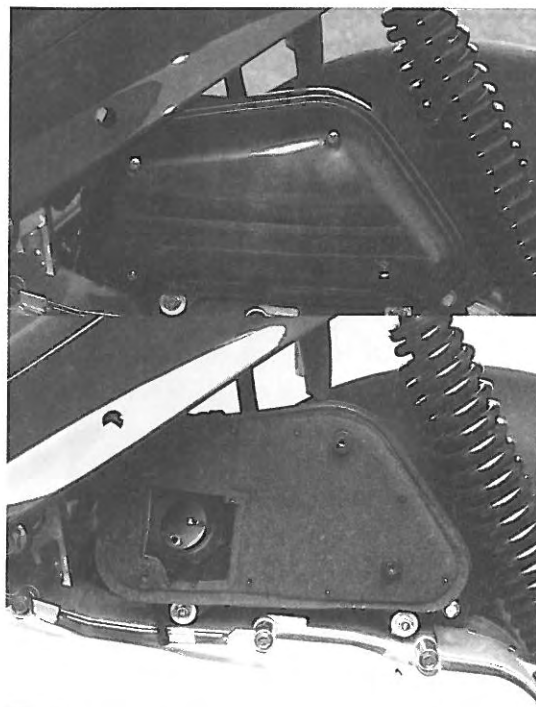

TIRE

To secure the best performance & extend life-span, please pay your attention to the following:

1.TIRE PRESSURE

Be sure that tire pressure in accordance with the standard pressure.


NOTE:

The inside temperature of tire must be even to outside or else pressure need to be adjusted. Besides the factor of loading, weight even cruising speed should take into consideration before adjusting.

The normal tire pressure:

Front: 1.5kg/cm²

Rear: 1.75kg/cm²

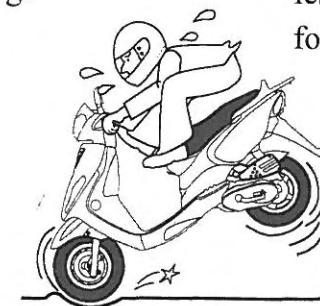

a.TIRE PRESSURE TOO HIGH



b.TIRE PRESSURE TOO LOW

2.SIMPLE CHECK:

Check the tire appearance before riding. Please ask your dealer for repairing or replacing if the appearance has been detected significant worn out or stabbed by nails, or glass.

3.INSPECTION FOR THE DEPTH OF THE TIRE GROOVE:

The appearance will become slippery due to significant worn out dusty or wet road riding. Please replace the tire if the depth is less than 0.8mm, see the following picture for reference.

LAMPS & SIGNAL LIGHTS

Make sure the front lamp, rear lamp, brake lamp, turn signal lamp, tail lamp and all other indicator lights working well.

SWITCHES

Make sure the switch of head lamp, turn signal lamp, brake lamp, horn, start button, and over take lamp working well.

FUEL

Be sure sufficient fuel in tank.

Tank capacity: 5.6 L

CAUTION:

1. Please fill the unleaded gas if your scooter is equipped with catalyster.
2. Do not fill up the gas over the neck of gas entrance, otherwise it will be spilling out due to the hot temperature.
3. It may cause inflammable if gas is split onto the engine or muffler.

CATALYSTER (OPTIONAL DEVICE)

Catalyst device is designed for decreasing air pollution from exhaust system and it is mounted inside the muffler.



1. Make sure to park your scooter away from flammable material, pedestrian or child to avoid danger due to yielding hot from muffler cover.
2. Don't try to use any fuel if it is not unleaded gas.
3. Don't try to turn off the main switch when riding.
4. Don't try to ride, idle or stop on the surface of inflammable.
5. Please keep your engine in good function all the time, otherwise high temperature will yield from catalyst device due to short circuit ignition, or fuel system working abnormal.
6. Please periodically maintain your scooter to ensure exhaust control system and catalyst device working well.

NOTATION FOR OPERATION & RIDING

1. Please make sure you are familiar with all the operation system & function before riding. Please contact with your dealers if there's any question.
2. Do not start the engine in a closed place due to potential gas, threat from poisonous exhaust amassed.
3. Please be noted the side stand must be withdrawn from the ground before riding, otherwise dangerous situation may occur due to your ignore.



STARTING ENGINE

1. Turn the main switch to "○" (ON)
2. When the throttle is totally loosed, hold the brake lever and push the start button, or use the kick starter to start the engine.

CAUTION:


If the engine can't be started, you should loose the start button to avoid losing significant electric power. Please do not push the button over 5 seconds per each time. Try kick starter to start the engine if the start button is not working properly.

WARMING UP THE ENGINE

To protect the engine, please warm up the engine 1~3 minutes before riding. Do not immediately accelerate when the engine is cold.


NOTE:

Please read the instruction "engine initial run-in" page26-before initial riding.

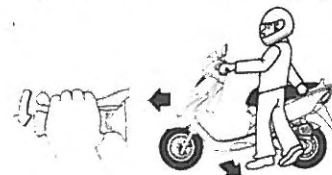



- Scooter riding(after warning up the engine):
 1. Hold the brake lever and push down the central stand.
 2. Adjust the angle of rear view mirrors within visible field.
 3. Try the function of signal light before riding.
 4. Turn the throttle grip gradually then close the signal light during riding.
- Accelerating(throttling):

Use the throttle grip control your cruise turning it to wards your side will speed up, and reversing it will slow down.

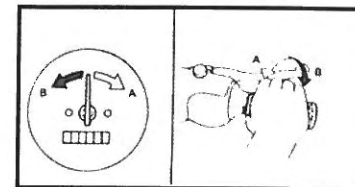

BRAKE OPERATION

1. Release the throttle grip.
2. Press front and rear brake levers gradually.

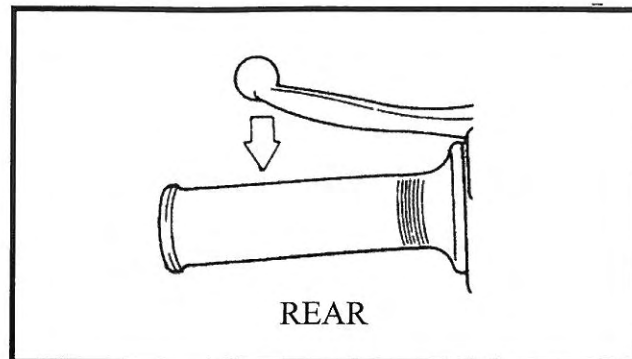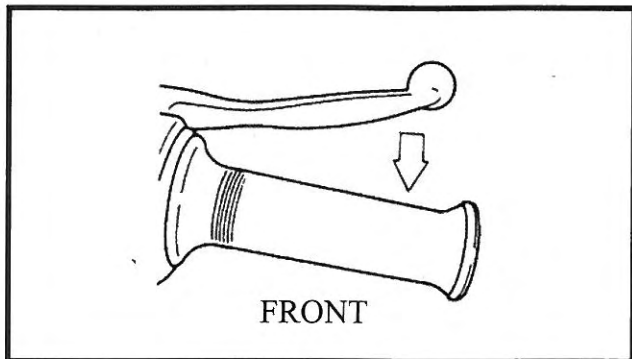

NOTE:

1. Sudden stop will cause sliding or falling down.
2. Use the braking carefully while you are turning, improper use of brake may cause sliding.
3. Slow down the speed when riding on the iron plate, railway track, wet road.
4. Braking on the wet road is difficult.
5. Slow down the speed when sloping down.

ENGINE INITIAL RUN-IN

0~1,000 MILES/riding will be the critical period regarding scooter life span. The new engine can't afford too much loading during the first 1,000kms. Every part of the engine will be run-in to obtain the correct clearance in this period. Be sure to avoid prolonging the throttling out totally or any operation causing high temperature in the engine. Please read careful the following information.

1. 0~150 MILES

Avoid over 1/2 throttling operation. Cool down the engine 5-10 min/ hour. Do not cruise by constant speed for riding.

2. 150~500 MILES

Avoid over 1/2 throttling operation for long riding.

3. 500~1,000 MILES

Avoid over 3/4 throttling operation.

NOTE:


Change gear & engine oil (4T engine) after 200 MILES.

4. OVER 1,000 MILES


Avoid full throttling in a long riding.

NOTE:

Please contact your dealers if any problem takes place during above periods.

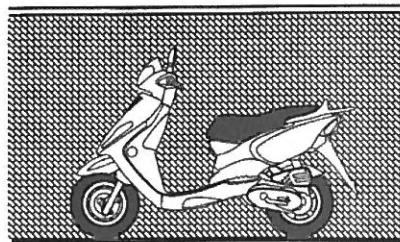

CORRECT

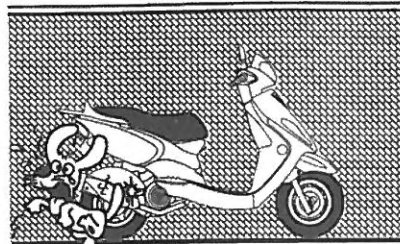


INCORRECT

PARKING:


Turn off the engine and pull out the key when parking the scooter.

NOTE:

Please park your scooter away from the child & pedestrians if the muffler is hot. Do not park your scooter on a slop or soft ground to avoid falling down.

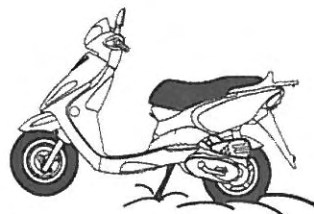

INCORRECT

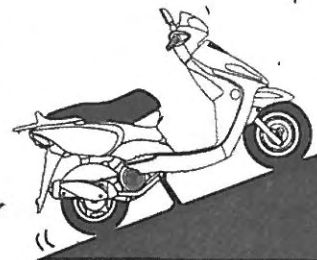

PERIODICAL MAINTENANCE

To secure the most safe & effective performance, please check, adjust and lubricate your scooter periodically. Periodical maintenance and lubrication should be acknowledge as an important instruction. Meanwhile, please pay your attention to the environment, climate, geography and riding status in order to set up a proper maintenance interval.

NOTE:

This scooter is designed to be riding on normal paved road. If under a dirt & wet condition, please clean the air-cleaner frequently, otherwise the engine will be worn out quickly.

If you are not familiar with the inspection & maintenance, please contact to your dealers.

PERIODICAL MAINTENANCE TABLE

In order to achieve safe riding, good performance and reduce pollution, please execute the recommended maintenance accordingly.

Item	Model 2T or 4T	Checking Content	MONTHS/DISTANCE(IN mile)FOR CHECKING						
			1 or 200 m	3 or 2000	6 or 4000	9 or 6000	12 or 8000	15 or 10000	18 or 12000
Engine oil	2T	Add	According to Oil warning light						
Engine oil*	4T	Replace (800cc, total 900cc)	○	Replace it per 1000mile					
Oil Filter	ALL	Replace	○	Clean it per 4000mile or replace it if required					
Coarse oil filter* (on oil draining bolt)	4T	Clean or replace it if necessary	○	Clean it per 2000mile or replace it if required					
Air cleaner	ALL	Clean or replace it if necessary		○	○	○	○	○	○
Air filter	ALL	Clean or replace it if required		○	○	○	○	○	○
Gear oil*	ALL	Replace (90cc, total 110 cc)	○	○		○		○	
Disk & drum brake	ALL	Leaking and function check		○	○	○	○	○	○
Clutch shoes*	ALL	Check or replace it if necessary		○	○	○	○	○	○
Rear brake arm	ALL	Function check and adjustment			○		○		○
Tires	ALL	Worn-out check or replace it if necessary		○	○	○	○	○	○
Wheel bearing*	ALL	Fasten tightly if loosen		○	○	○	○	○	○
Front fork*	ALL	Leaking and function check	○	○	○	○	○	○	○
Steering head bearing*	ALL	Check looseness. Adjust it if required			○		○		○

NOTE : 1.Items with “*” mark indicate our recommendation to have it done by PGO dealer.

Item	Model 2T or 4T	Checking Content	MONTHS/DISTANCE(IN mile)FOR CHECKING						
			1 or 200 m	3 or 2000	6 or 4000	9 or 6000	12 or 8000	15 or 10000	18 or 12000
Rear absorber*	ALL	Leaking and function check	○	○		○		○	
Main/Side Stand	ALL	Function check or replace it if required	○	○	○	○	○	○	○
Nuts, bolts, fasteners	ALL	Tighten it if required	○	○	○	○	○	○	○
Battery	ALL	Make sure that the voltage stayed over 12.8V. Recharge the battery it required. Clear the poles.		○	○	○	○	○	○
				○	○	○	○	○	○
Valve gap*	4T	Check and adjust when engine is cool (0.08mm for IN & EX)	Adjust it when necessary						
Carbon cleaning *	2T	Clean combustion carbon when engine output reduced			○		○		○
Spark plug*	ALL	Clear or replace if required		○	○	○	○	○	○
V belt*	ALL	Worn out check or replace if necessary.			○	A	○	A	○
Fuel feeding system*	ALL	Crack and blockage check. Replace it if necessary.			○		○		○
Engine idle speed*	ALL	2T engine: 1900±100 rpm 4T engine: 1700±100 rpm	○	○	○	○	○	○	○
Carburetor idle A/F Adjustment*	ALL	Check and adjust referring to CO/HC Percentage.	○	○	○	○	○	○	○

NOTE :

1. Items with “*” mark indicate our recommendation to have it done by PGO dealer.
2. “A” denotes that function check or replace it when the engine performance reduces significantly.

NOTE 1 :

For 4T engine, the engine oil shall be changed completely after run-in period 300km or one month later.

This can make sure the engine runs smoothly.

NOTE 2 :

The exchange of brake fluid

1. After disassembling of brake main cylinder or caliper, do change the new fluid.
2. Check the fluid level often, Refill if necessary.
3. Change the oil seal of main cylinder and caliper every two years.
4. Change the brake fluid hose every four years.


Exhaust control system (only be valid for the bike equipped catalyst):

1. Catalyster will not be possible to be withdrawn individual, the only you have to do is to maintain fuel, ignition, intake/exhaust system periodically.


1. Maintenance procedure of air clearer (see page 33).
2. Spark plug's checking: please repair or replace if spark plug is dirty.
3. Fuel system's checking: please repair or replace if fuel pipe is jammed or broken.
4. Muffler's checking: please fix tightly once or renew a gasket if it is leaking.
5. Idle rpm's checking: please fix tightly once or renew a gasket if throttle cable.
6. Exhaust density checking while idle: please left the job to any service center of anti-pollution inspection for carburetor adjusting.

THE AIR-CLEANER

4T Engine(100/125/150 cc)

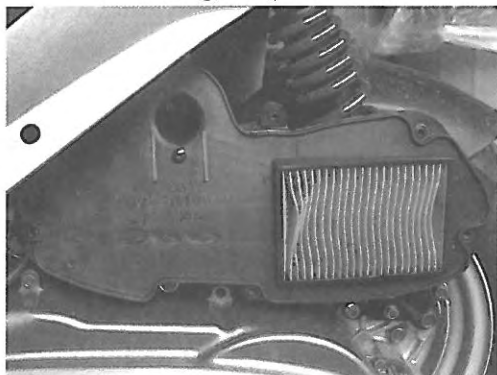

2T Engine (50 cc)

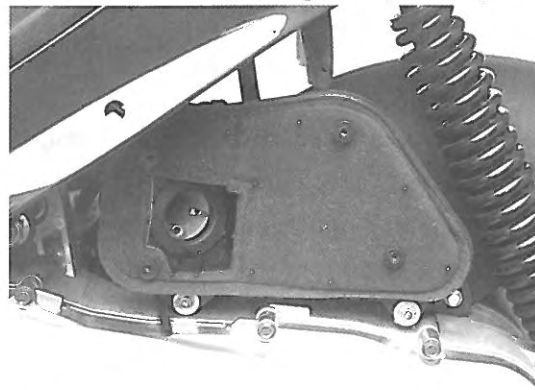

If there is too much accumulation of dust inside the air cleaner, it will reduce the output of engine performance and cause abnormal consumption of fuel.

Procedures of changing the air element:

1. Take off the cover of filter.
2. Draw the core of filter.
3. Clean and dry by air compressor, then spray with 5 grams motor oil (SAE10W30) approximately or replace it if necessary.
4. Put the cover back carefully to make sure fitted to the cover without leakage.

NOTE : Please do not start the engine before the air-cleaner is assembled, otherwise the piston & main case will be badly worn out.

THE SPARK PLUG

Spark plug is one of the important parts of the engine and it is easy to be checked. According to spark plug condition, you may infer the situation of the engine. The ideal color of the electrode should be light brown. If there's any problem, please ask your dealers to check will be corroded & worn out due to the hotness and dirt for the time being. If happened, please change a new spark plug.

- Standard spark plug: For 4T Engine C7HSA(NGK) ; CR7HSA for EEC specification
For 2T Engine BP7HS(NGK) ; BPR7HS for EEC specification
- Spark plug gap : 0.6~0.7mm

When checking the spark plug, please cleaning the surface of the washer and screw, the fasten it.


- Toroue: 1.2kgf-m

NOTE:

If there is no wrench or torque gauge can be used, please wrenching it by your fingers turn 1/4~1/2 and later use the wrench to fix it to the standard torque once available.

EXCHANGE OF GEAR OIL

- Please change the oil after first 200mile ride, then it is recommended to change the gear oil every 2000miles.
- Regular changing volume : 90 c.c. (SAE 140)

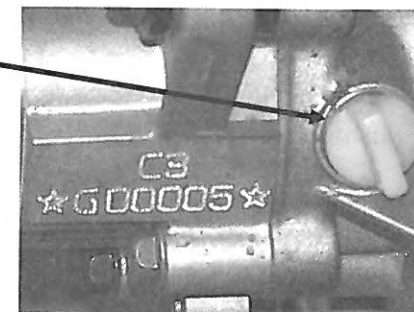

BRAKE ADJUSTMENT

The clearance of lever

- (a) Front brake: 10~20 mm
- (b) Rear brake: 10~20 mm


NOTE:

Please contact to PGO dealer if the clearance is incorrect.

Rear brake check

The indicator will help you to easily screen the status of brake function. Please replace the shoe of rear brake if indicator reaches the warning line.

- 1. Brake indicator
- 2. Warning line

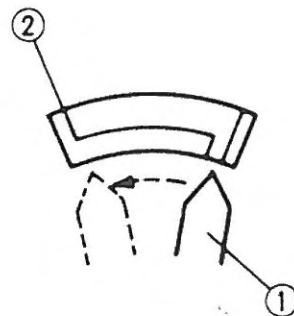


Front brake check

Please acting the brake for checking. If the pads almost reach the bottom, please ask your dealers to change it by:

- 1. visual check
- 2. measure the pad thickness, if it is less than 2mm, then you have to replace a new set.


NOTE: If the brake area is wet(getting water), the brake will be out of order and dangerous to you.

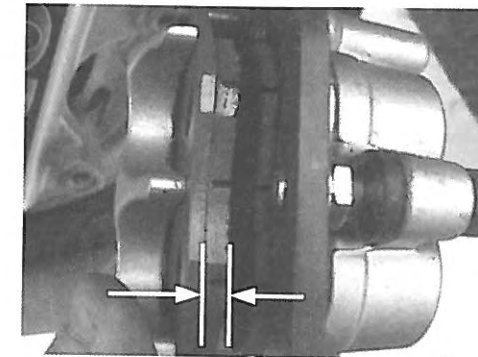

BRAKE FLUID CHECK

Insufficient brake fluid will make the air into the brake system and may cause the brake out of control. Please check the brake fluid level all the time and refill it if necessary.

- 1. When checking the oil level, please turn the handle bar assuring the brake oil on the horizontal position.
- 2. Use correct brake oil, otherwise the oil seal will be defected. This will cause the oil leaking & losing the brake function. Standard brake oil: FMVSS DOT3 or SAE J1703.
- 3. Refill same kind of brake oil. Mixing with different oils will yield a bad reaction and cause the brake out of order.

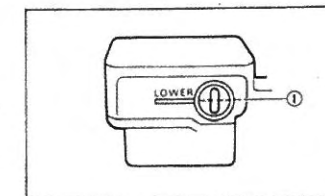

1. LOWER LEVEL

4. To avoid the water getting into the main cylinder, otherwise the boiling temperature of the brake oil will be declining make the air be obstructed.
5. Brake oil could reode the painting surface and plastic parts. If any oil were spilled out, please clean it immediately.
6. If the brake oil can't be refilled to the standard level, please check with your dealers.

FRONT FORK CHECK

NOTE:

In order to avoid falling down, please park your scooter firmly will be safe.

1. Eyes checking:

If any scratched, broken or leaking inside the pipe by vision.

2. Function check:

Park the scooter on flat place.

(A) Hold the handle and keep the scooter in vertical position, and then hold the front brake lever.

(B) Move up & down the front fork for several times.

NOTE:

If found the front fork is not smooth or broke, please contact your dealers.



2. FUNCTION CHECK

FUSE REPLACEMENT

1. The fuse is located beside the battery.
2. Take off front cover by loosening two screws.
3. If the fuse is burned out, turn off the main switch and related switches, replace a correct fuse, then turn on and check the circuit function, please contact with your dealers if the problem remains.

NOTE:



Do not use a higher ampere fuse than the standard one. A different (abnormal) fuse will damage circuit system and may cause fire.

BATTERY

The battery is in free-maintenance type (MF), so it won't be necessary to check or refill the liquid. If the liquid is leaking, please contact with your dealers A.S.A.P.

NOTE:

Please do not try to take off the sealed rubber even when charging the battery, that will damage your battery.

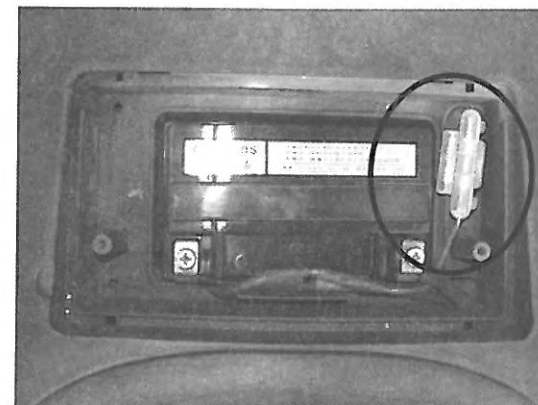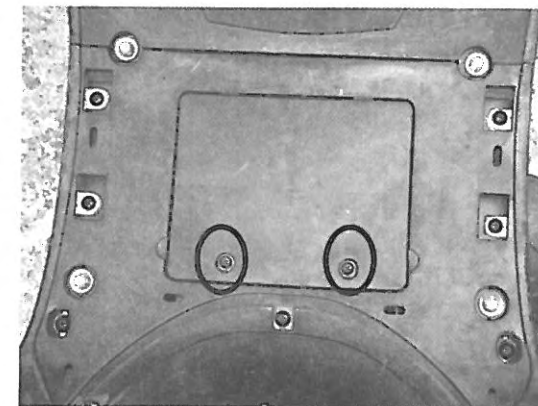

SPECIFICATIONS


TYPE	PA-50	PA-125	PA-150
DIMENSION			
overall length	1780mm	1780mm	1780mm
overall width	645mm	645mm	645mm
overall height	1060mm	1060mm	1060mm
axles distance	1210 mm	1210 mm	1210 mm
DRY WEIGHT	100KG	101KG	101KG
ENGINE			
type	2 stroke	4 stroke	4 stroke
model no.	P5	C2	C5
cooling	forced air cooling	forced air cooling	forced air cooling
cylinder array	single	single	single
displacement	49 c.c	124.9 c.c	147.5 c.c
start system	electric and kick	electric and kick	electric and kick
lubrication system	separated pump	compress spray	compress spray
lubricant	SAE30 (FC class)	SAE15W40	SAE15W40
capacity	1.0 L	0.9 L	0.9 L
spark plug	BP7HS(NGK)	C7HSA(NGK)	C7HSA(NGK)
clutch type	DRY TYPE CVT	DRY TYPE CVT	DRY TYPE CVT
gear shift type	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)	AUTOMATIC (V BELT)

SPECIFICATIONS

TYPE	PA-50	PA-125	PA-150
GEAR OIL			
model	SAE 140	SAE 140	SAE 140
min. volume	90cc	90cc	90cc
total volume	110cc	110cc	110cc
AIR CLEANER	SPONGE	DRY FILTER	DRY FILTER
FUEL:			
gasoline	UNLEADED ONLY	UNLEADED ONLY	UNLEADED ONLY
capacity of tank	5.6L	5.6L	5.6L
TIRE			
size (front)	3.0-10	3.50-10	100/90-10
(rear)	3.0-10	3.50-10	100/90-10
ELECTRIC SYSTEM			
ignition system	C.D.I	C.D.I	C.D.I
generator system	AC FLYWHEEL MAGNET	AC FLYWHEEL MAGNET	AC FLYWHEEL MAGNET
BATTERY TYPE			
capacity	YTX4L-BS 12V 3AH	YTX7A-BS or YTS7A-BS 12V 6AH	YTX7A-BS or YTS7A-BS 12V 6AH

SPECIFICATIONS

TYPE	PA-50	PA-125	PA-150
BULB VOL / WATT * Q'TY			
head lamp (HI /LO)	12V 35W / 35W * 1	12V 35W / 35W * 1	12V 35W / 35W * 1
rear lamp / stop lamp	12V-LED	12V-LED	12V-LED
signal light(FRONT)	12V 21W * 2	12V 21W * 2	12V 21W * 2
signal light(REAR)	12V 10W * 2	12V 10W * 2	12V 10W * 2
speedometer indicator	12V 1.7W * 2	12V 1.7W * 2	12V 1.7W * 2
high beam indicator	12V 1.7W * 1	12V 1.7W * 1	12V 1.7W * 1
signal indicator	12V 1.7W * 2	12V 1.7W * 2	12V 1.7W * 2
oil warning indicator	12V 1.7W * 1	NA	NA

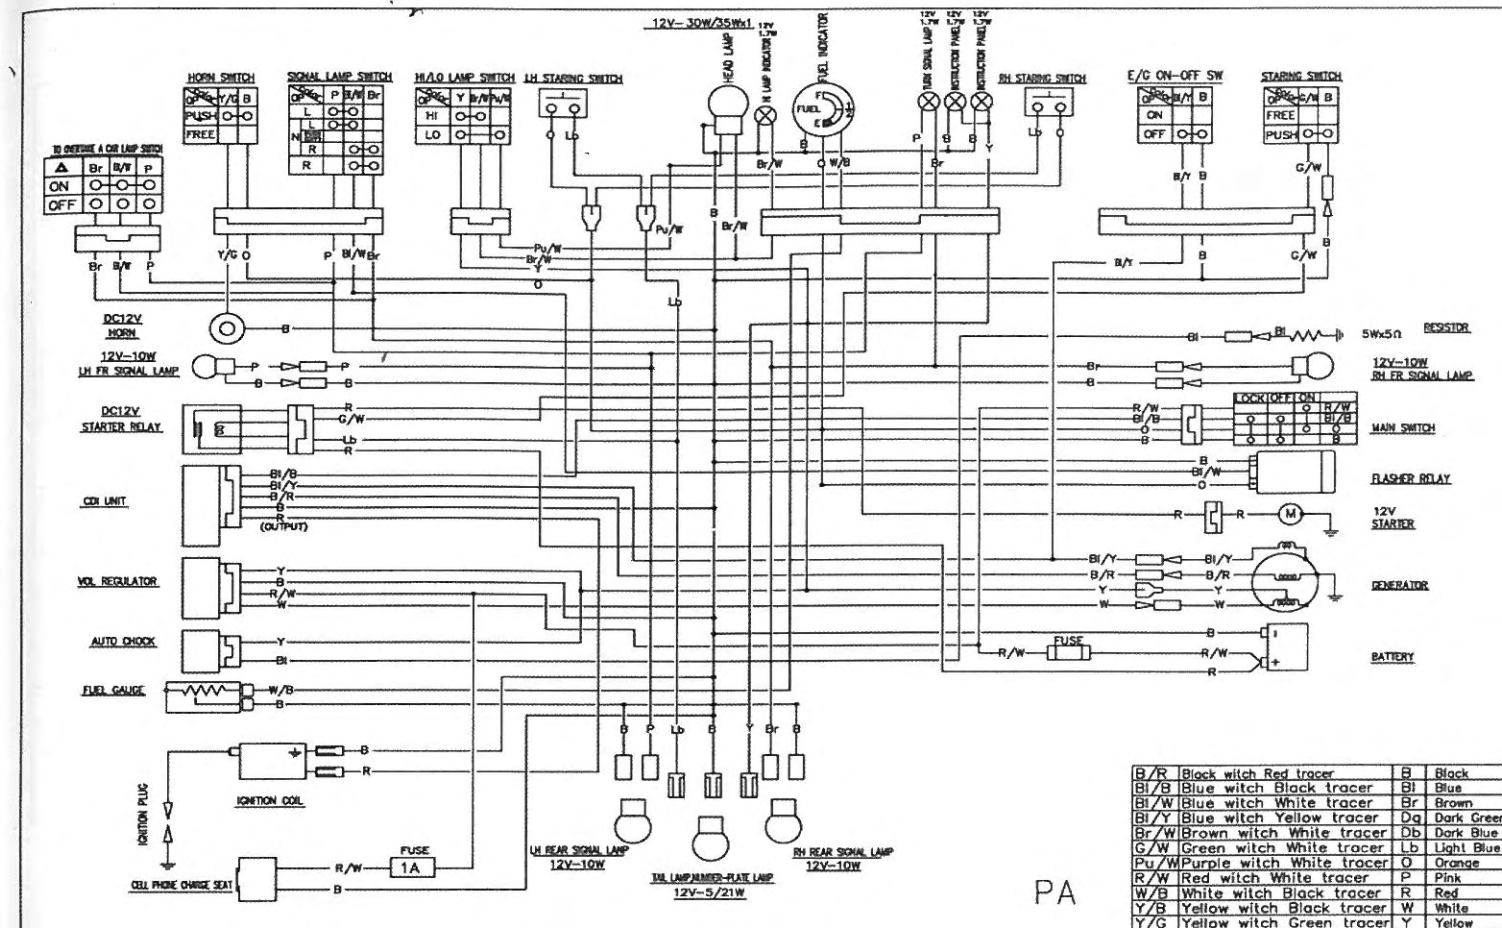

Periodic Maintenance Record

Plan mile	Actual mile	Date	Dealer Sign.	Plan mile	Actual mile	Date	Dealer Sign.
200				10,000			
1,000				11,000			
2,000				12,000			
3,000				13,000			
4,000				14,000			
5,000				15,000			
6,000				16,000			
7,000				17,000			
8,000				18,000			
9,000				19,000			

- Please decrease maintenance period when often driving in dusty areas.
- Copy the blank table to use when odometers is over the above table planned.

PART NO. C1352170000

Motive Power Industry Co. Ltd.
FACTORY: No. 66 Shan-Jeau Rd, Da-Tsun Hsiang
Chang-Hwa Hsien Taiwan R.O.C

Reporting Safety Defects

If you believe that your vehicle has a defect, which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying PGO SCOOTERS

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a Safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in any individual problems between you your dealer, or PGO SCOOTERS

To contact NHTSA you may either call Auto Safety Hotline toll-free at 1-800-424-9393 (202-366-0123 in Washington, DC area) or write to:

NHTSA
U.S. DEPARTMENT of TRANSPORTATION
400 7 Street SW, (NSA-11)
Washington, DC 20590

You can also obtain other information about motor vehicle safety from the Hotline